


**MOUNTING PROCEDURE****KIT SAVE CARTER  
APRILIA RSV4****AR1101****KIT**

X2. PVC "HEAD"  
X2. BUSH Ø 10  
X2. THICKNESS HIGH 16  
X2. THICKNESS HIGH 22  
X1. BOLT 10X90 (RIGHT)  
X1. BOLT 10X70 (LEFT)  
X4. WASHERS Ø 10  
X2. BOLT 10X80  
X2. NUTS Ø 10  
X2. IRON BRACKET 8MM

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

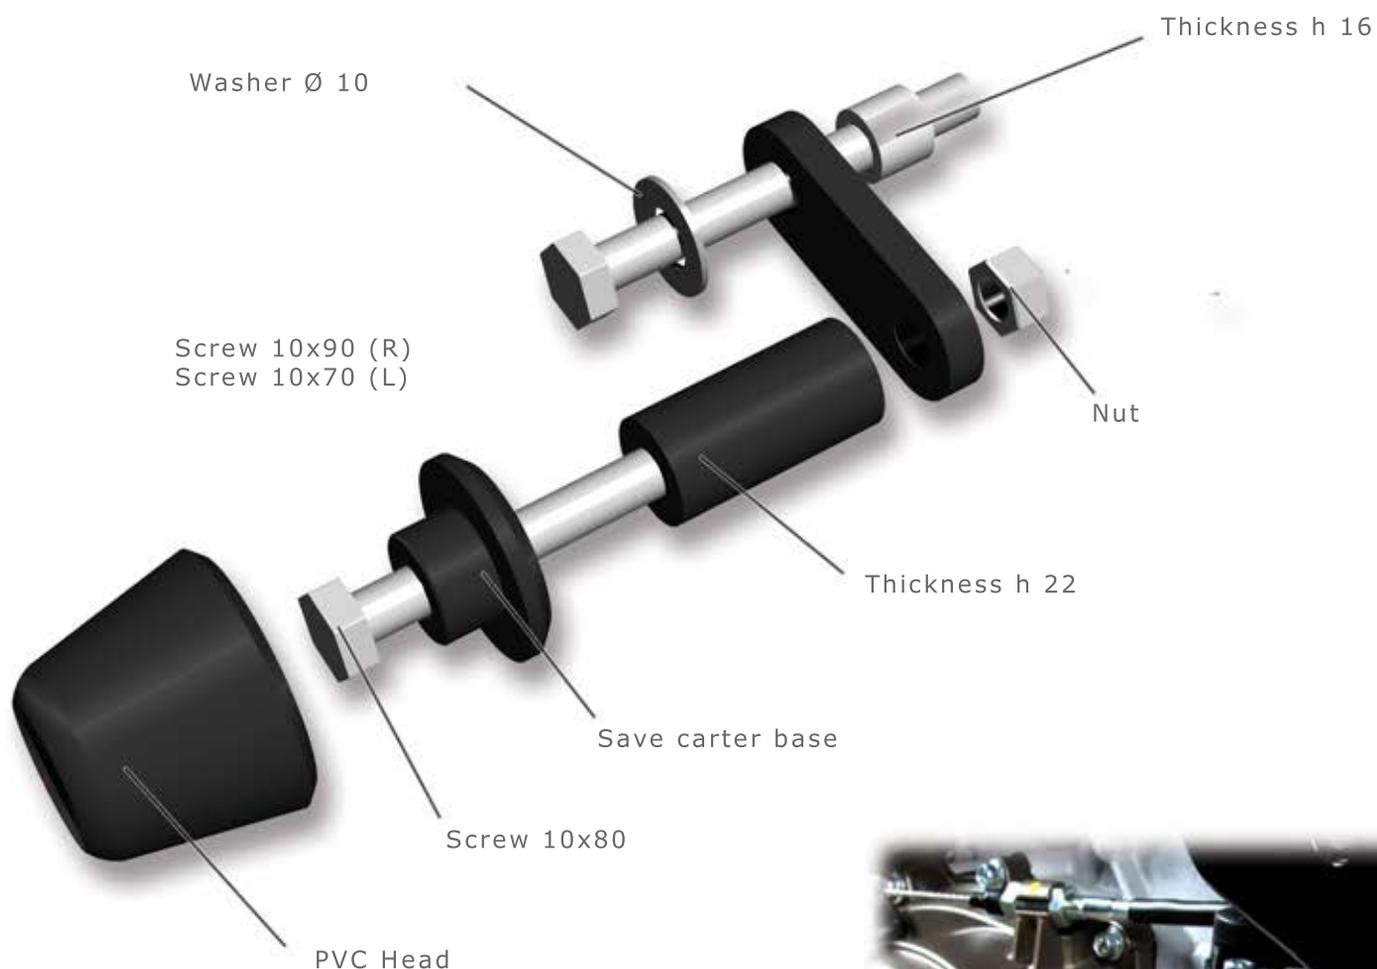

SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE). FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY.