

## MOUNTING PROCEDURE

KIT SAVE CARTER  
KAWASAKI ER6-N '12 - '13


**KE6101-12**

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)


## KIT

X2 PVC HEAD  
X1 SPACER 45 MM (RIGHT)  
X1 SPACER 60 MM (LEFT)  
X1 BOLT 10X80 (RIGHT)  
X1 BOLT 10X100 (LEFT)  
X2 NUT DIAMETER 10  
X2 BRACKET

### RIGHT SIDE

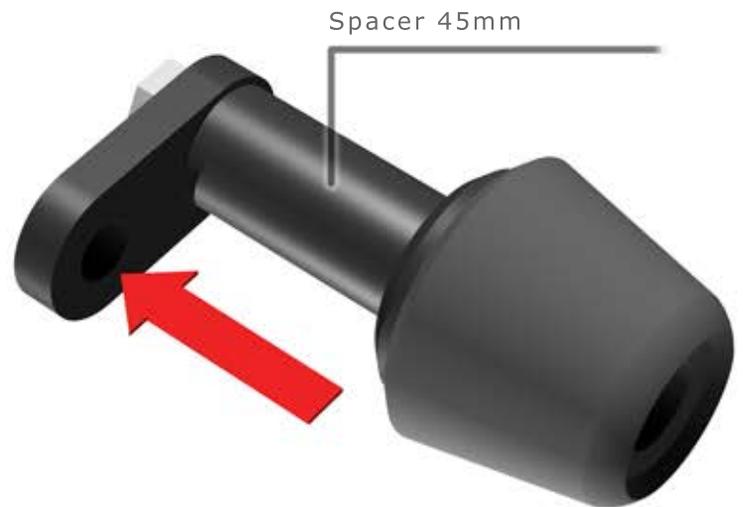

### LEFT SIDE

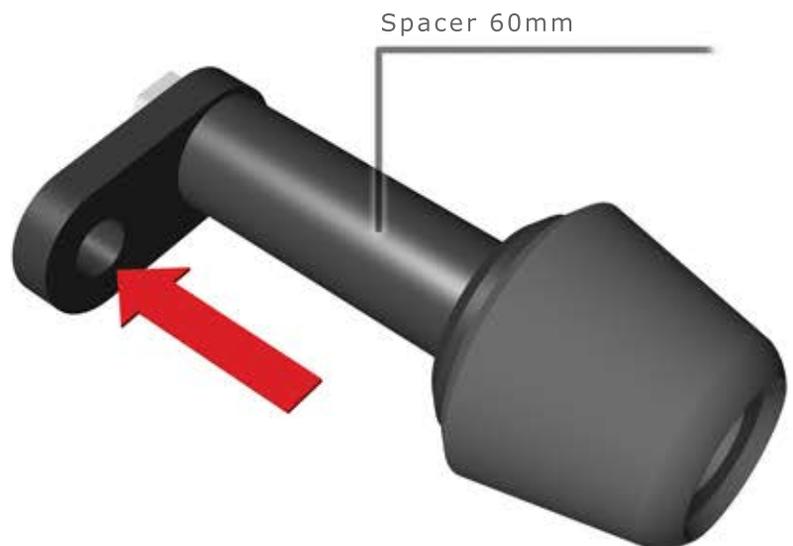

### READ BEFORE THE FIXING PROCEDURE

UNSCREW THE BOLTS SHOWN IN THE PICTURES  
SCREW THE KIT SAVE CARTER IN CONTRAST USING THE ORIGINAL SCREWS.  
LOCK CAREFULLY ALL.  
FIX THE SAVE CARTER HEAD IN PVC ONLY AFTER FIX ALL